


# Cottage Door

## Assembly Instructions



# Tools and Parts

## Tools Needed

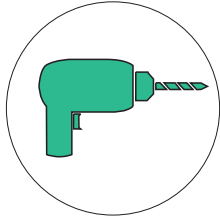


*Drill with a Phillip's bit*


*You may need a soft-headed hammer to gently tap the wood slats together. You can also wrap a soft cloth around the head of a regular hammer.*

**If any of the slats have been damaged during shipping, call us at 800-891-8312 and we will expedite a replacement slat.**

## Parts Included

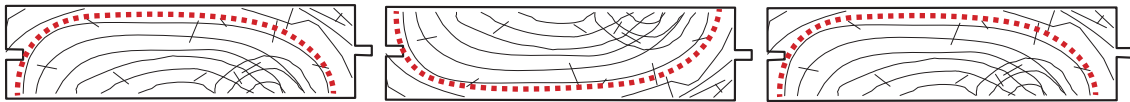

**Important:** *Alternate the direction of the wood grain every other slat.*

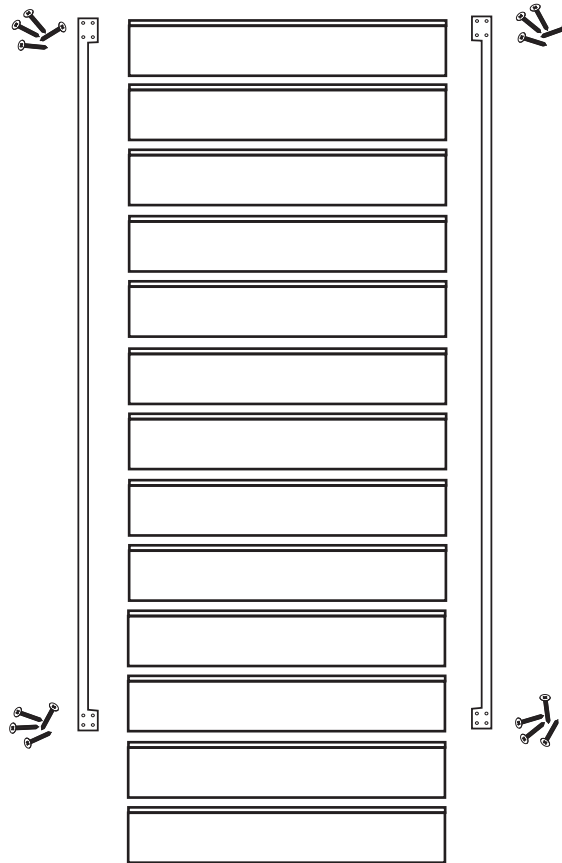


# Assembly Instructions

We recommend assembling your Door on a large, flat surface such as a floor or large work surface or table.


The wood slats must be finished before assembly. Allow plenty of time for drying.

## Assembling Your Door

1. One-by-one slide each slat up, inserting the tongue on top into the bottom groove of the slat above it. Gently tapping the slat may be required. Check that there are no gaps.

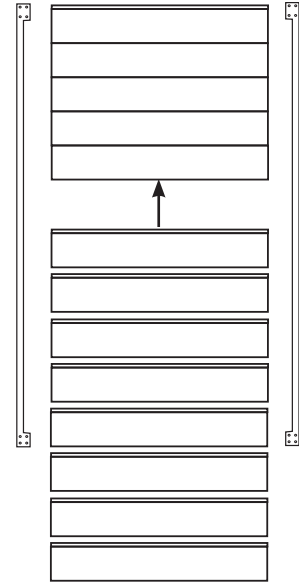

2. Once all slats are together, you may attach the metal rails.

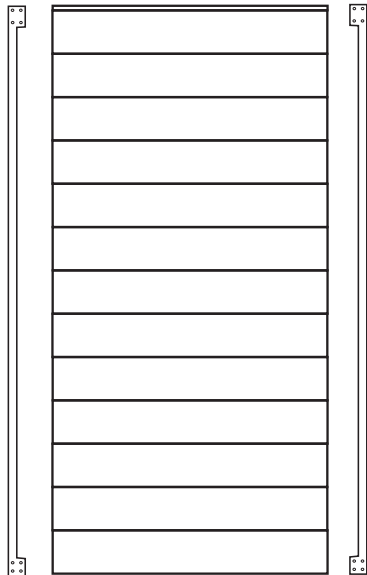

3. Attach rails using four Screws in each corner through the predrilled holes.

